



105831

Gebrauchsanleitung
Wokpfanne

D/A/CH

Instruction for use
Wok pan

GB/UK

Mode d'emploi
Poêle wok

F/B/CH

Istruzioni d'uso
Padella wok

I/CH

Instrucciones de uso
Sartén wok

E

Manual de instruções
Frigideira wok

P

Gebruiksaanwijzing
Wokpan

NL/B

Betjeningsvejledning
Wokpande

DK

Инструкция по обслуживанию
Сковорода вок

RUS

Kullanma talimatnamesi
Wok tava

TR

Instrukcja obsługi
Patelnia wok

PL

Návod k obsluze
Pánev wok

CZ

Upute za uporabu
Wok tava

HR

Használati útmutató
Wok serpenyő

H

Οδηγίες χρήσης
Τηγάνι γούοκ

GR

Technical specifications:

Wok pan

- Stainless steel
- Capacity: 5 litres
- Weight: 2.0 kg (2.85 kg with lid)
- Stainless steel lid included
- Cold handles
- Dimensions: Ø 380 mm, H 100 mm (height with lid 235 mm)

Code-no. 105831

Tips for use and cleaning

- Before first use, clean the wok pan thoroughly with a soft cloth or sponge, washing-up liquid and hot water. This will remove any leftover production or packing material. Rinse in clean water and dry.
- Before using, ensure the wok pan is clean and dry, as otherwise the surface may be discoloured at high temperatures.
- **Never** place an empty wok pan on a hot heating surface.
- Use the lowest temperature possible when cooking to reduce discolouration of the wok.
- Clean the wok pan **after each use** with a soft cloth or sponge and washing-up liquid.
- Strong dirt can be removed by soaking the pan for a moment, then cleaning it following the above instructions.
- Discolouration can be removed with vinegar or citric acid. **After cleaning**, rub the inside and outside of the wok pan with a soft cloth and small amount of vinegar or citric acid. The will have its old shine restored.
- Use only soft cloths, never use any cleaning substances that may scratch the unit's surface.
- After cleaning, wipe and polish the surface with a soft, dry cloth.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120