



NOTE 1: APPLY LUBRICANT TO INSIDE SURFACE OF CYLINDER & ITEM NUMBERS 5 & 6.

