



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Griff	Handle	E01505393001
2	Deckel	Lid	E01505393002
3	Behälter m. Griff	Container w. handle	E01505393003
4	Gehäuse	Housing	E01505393004
5	Boden	Bottom	E01505393005
6	Gehäuse-Unterteil	Housing - lower part	E01505393006
7	Abdeckung	Cover	E01505393007
8	Fuß	Base	E01505393008
9	Zündschalter	Ignition switch	E01505393009
10	Schalter Kochmodus	Switch f. cooking modus	E01505393010
11	Gasventil m. Thermoelement	Gas valve w. therocouple	E01505393011
12	Düse, Propane, D 100	Nozzle, propane, D 100	E01505393012
13	Düse, Erdgas, D 200	Nozzle, natural gas, D 200	E01505393013
14	Abdeckung	Cover	E01505393014
15	Brenner	Burner	E01505393015
16	Luftestellscheibe	Air focusing screen	E01505393016
17	Thermostat	Thermostat	E01505393017
18	O-Ring	O-ring	E01505393018
19	Halterung	Holder	E01505393019
20	Befestigung	Fixing	E01505393020
21	Piezozünder m. Zündkerze	Piezo igniter w. ignition plug	E01505393021
22	Halterung	Handle	E01505393022
23	Schalter, Warmhalten	Keep warm button	E01505393023
x	Reisgabel	Rice fork	A01505138



Gas-Reiskocher, 10L

Artikel-Nr.: 1505393

Ersatzteilliste

07.02.2024

Seite

2 / 2